


# CLUTCHTECH

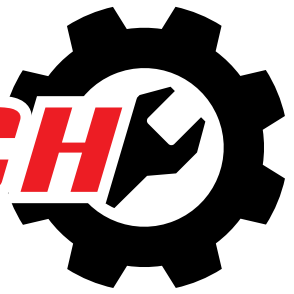

## TSB-CSC01

### Bleeding Concentric Slave Cylinders

When fitting a new Concentric Slave Cylinder (CSC) it is important NOT to pressure bleed the hydraulic clutch system. This can over pressurize the concentric slave cylinder & cause the cylinder to fail.

Please follow the manual bleeding procedure below.

- Open the bleeder
- Depress the clutch slowly
- Keep clutch pedal depressed (Do NOT Release)
- Close bleeder valve
- Slowly release clutch pedal

The manual bleeding procedure must be completed 20 to 25 times.

Remember to top up the reservoir during the bleeding procedure & only use hydraulic fluid that complies with the manufacturer's specifications.

Xtreme promotes the use of the vacuum or reverse bleeding tools. All tools are available from your nearest Xtreme distributor.



[youtube.com/watch?v=VWQaGwfGfGY](https://youtube.com/watch?v=VWQaGwfGfGY)



Scan with a QR app on your smart phone

#### LEADING BRANDS

CLUTCHPRO CLUTCHPRO



australianclutch.com.au

1800 CLUTCH (258824)

